


**Important:** It is **MANDATORY** that the UV-C lamp be replaced every 12 months to maintain optimum performance.

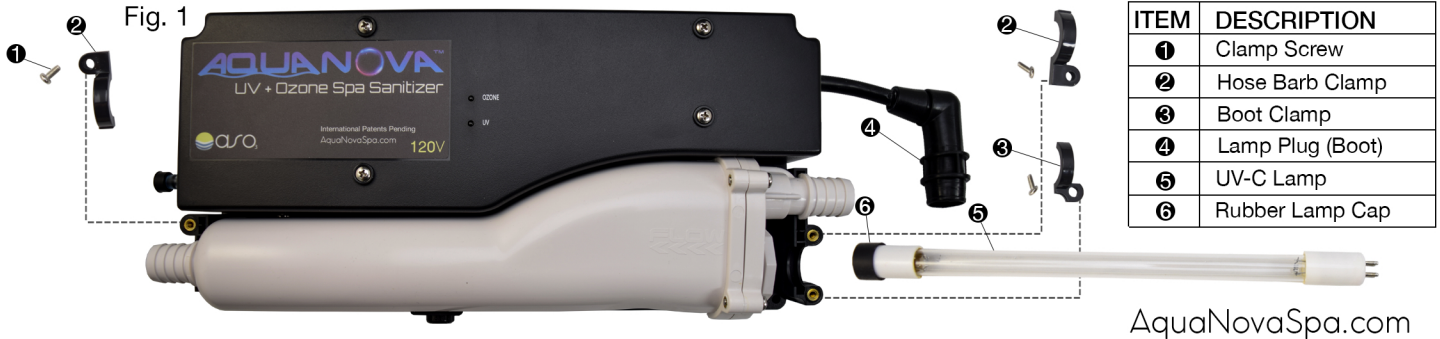

AquaNovaSpa.com

**DANGER: TURN THE SPA CIRCUIT BREAKER TO THE OFF POSITION!**  
**WARNING: ALLOW BULB TO COOL DOWN PRIOR TO REMOVING FROM QUARTZ CHAMBER.**  
**DANGER: NEVER LOOK AT THE LIT BULB. THIS CAN CAUSE SEVERE EYE DAMAGE OR BLINDNESS.**

### UV-C Lamp Replacement:

**CAUTION: NEVER REMOVE CLAMPS WITHOUT FIRST TURNING POWER OFF AT SOURCE.**

1. Turn off circuit breaker to spa and allow lamp to cool.
2. Remove the boot clamp ② and hose barb clamp(s) ③.

**WARNING: DO NOT TOUCH THE UV-C LAMP'S GLASS WITH YOUR BARE HANDS.** Oil from your skin will cause a hot spot on the glass, which will shorten the life expectancy of your UV-C lamp ⑤.

3. Disconnect the UV-C Lamp ⑤ by gently pulling on the lamp plug ④. Slide it out from inside the quartz chamber (Discard lamp at appropriate location-do not discard in garbage can. Visit [www.LampRecycle.org](http://www.LampRecycle.org) for disposal instructions.)

**NOTE:** Discard the black rubber lamp cap. ⑥ It was for shipping purposes only and is not required on the new UV-C lamp.

4. Insert new UV-C lamp into the quartz chamber and reconnect the lamp plug ④. Push lamp plug ④ securely into quartz chamber.
5. Reattach the UV boot clamp ② and hose barb clamp(s) ③.
6. Turn on circuit breaker to spa.
7. With power on, hold down the reset button (Fig.2) until the LED lights both flash yellow. Release once light turns green.
8. Your spa is ready to go.

Fig. 2



Hold down the reset button for approx. 10 seconds.