

A close-up photograph of a grey concrete outdoor kitchen prep station. The station is built on a stone wall. On the left, there is a cluster of fresh vegetables including a yellow bell pepper, a red bell pepper, a red onion, and a yellow lemon. In the center, a white cutting board is set within a recessed area of the concrete. A large kitchen knife with a black handle and a silver blade lies on the cutting board. To the right of the knife, several green bell peppers are arranged, some whole and some sliced. The background shows a wooden fence and green foliage.

barkman[™]
creating concrete solutions


Harvest Grove Outdoor Kitchen Prep Station with Waste Receptacle Instruction Manual

Materials Included:

- 12" standard quarry stone - 42 pieces
- 8" standard quarry stone - 10 pieces
- 4" standard quarry stone - 10 pieces
- 4" x 4" x 12" quarry stone - 1 piece
- 4" x 4" x 4" quarry stone - 1 piece
- 1-piece ebony accent band
- 1-piece ebony countertop
- waste receptacle frame
- pull out waste receptacle drawer
- waste chute, base and cutting board
- concrete screws with drill & driver bits
- steel drill bit
- plastic shims
- 1 tube of landscape glue
- gloves
- instruction guide
- installation video
- landscape design plan

Other Items Needed:

- drill
- caulking gun
- measuring tape/ruler

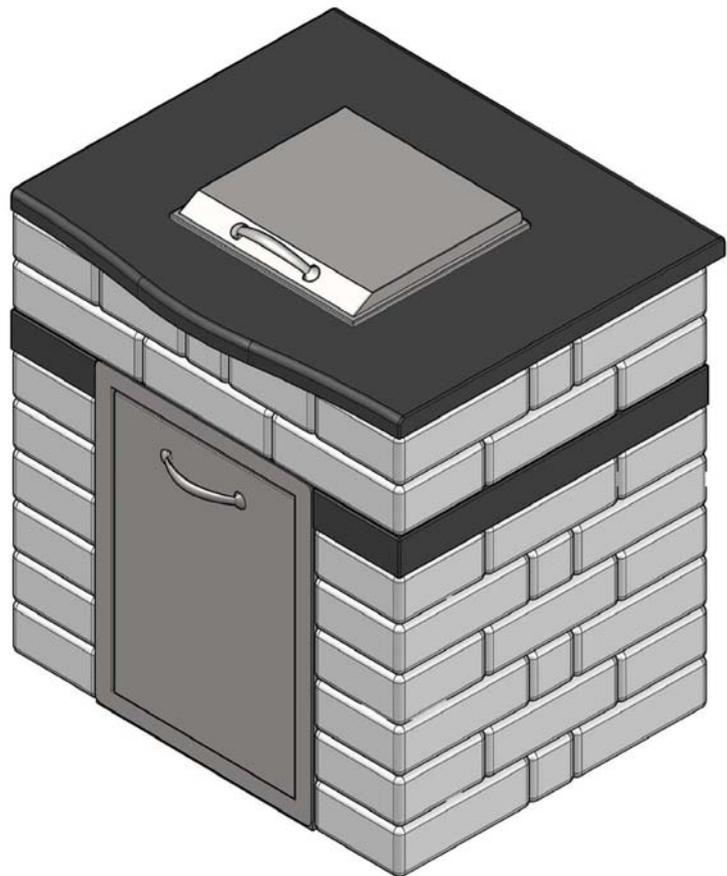

Note:

If installing your prep station with waste receptacle on an unstructured base, please ensure to follow these steps:


- Excavate area approx. 9" below grade
- Excavate approx. 6" larger than your actual kit dimensions to ensure a stable base.
- Fill with ¾" down limestone and compact firmly
- Level out ½" of sand and install kit as per the instruction guide.
- If you are installing on a solid base such as an existing patio and/or base prep is not necessary, then you can proceed to the first step.

These instructions may not refer to all base conditions. Base prep will greatly depend on existing ground conditions and may require alternate techniques.



Scan our QR code to watch our online instruction videos or go to youtube.com/barkmanconcrete

For any issues on Sunstone steel components or warranty claims, please call Texas BBQ Wholesalers at 888-934-9449 or email them at service@sunstonemetalproducts.com.

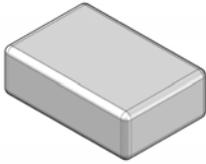


12" standard quarry stone



4" standard quarry stone




8" standard quarry stone

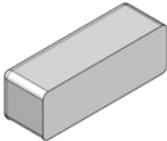


4" x 4" x 12" quarry stone




4" x 4" x 4" quarry stone

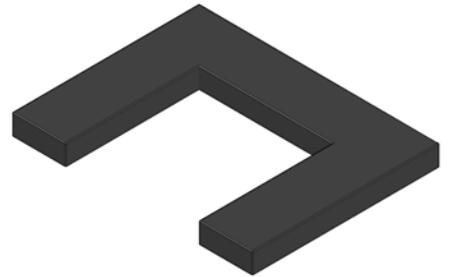

1-piece ebony accent band

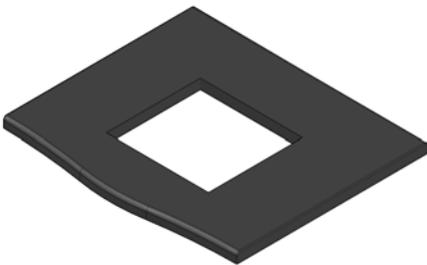

1-piece ebony countertop

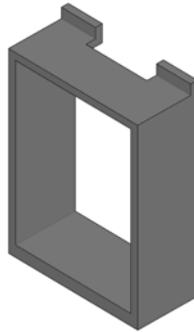

waste receptacle frame




pull out waste receptacle drawer



waste chute, base and cutting board

Note: Certain steps indicate the use of landscape glue. This is for added stability but it's optional and at the discretion of the user.


STEP 1

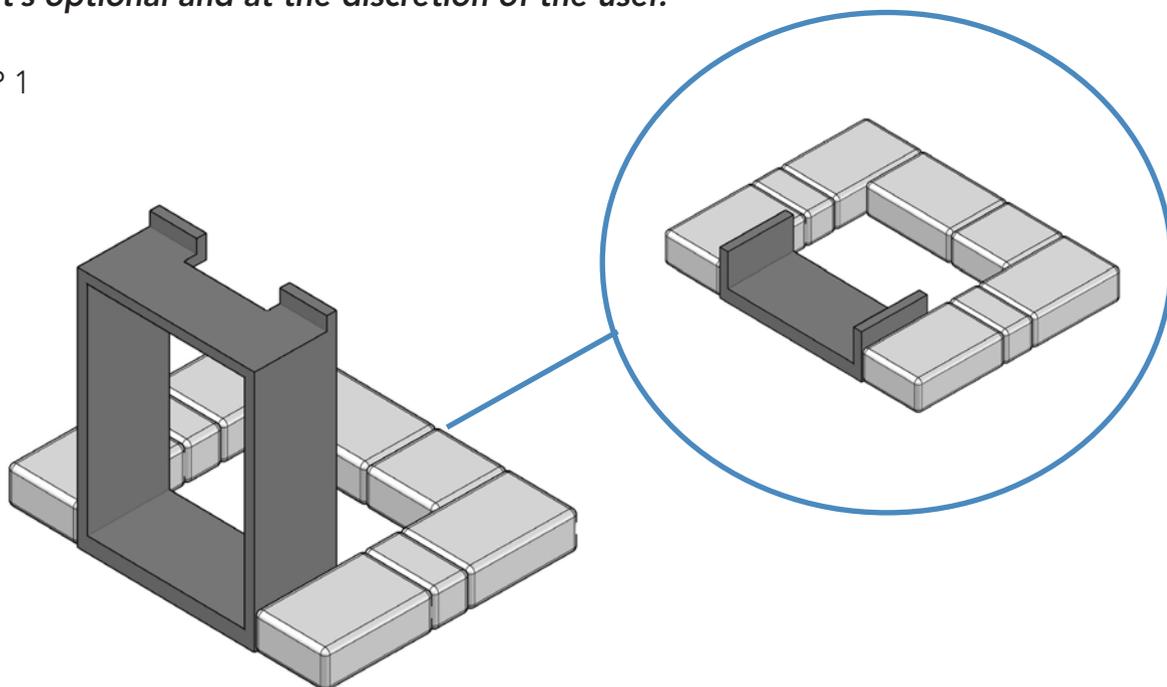

Lay down the stone pattern shown using 12", 8" and 4" standard pieces along with the waste receptacle frame. Glue the touching blocks to the waste receptacle frame for this and future layers. Measure at every step to ensure the remaining space between the stone and top of frame is 27" minus 4" for every layer of stone.


Check that stones are level at every step. Use included shims for adjustments.

STEP 2

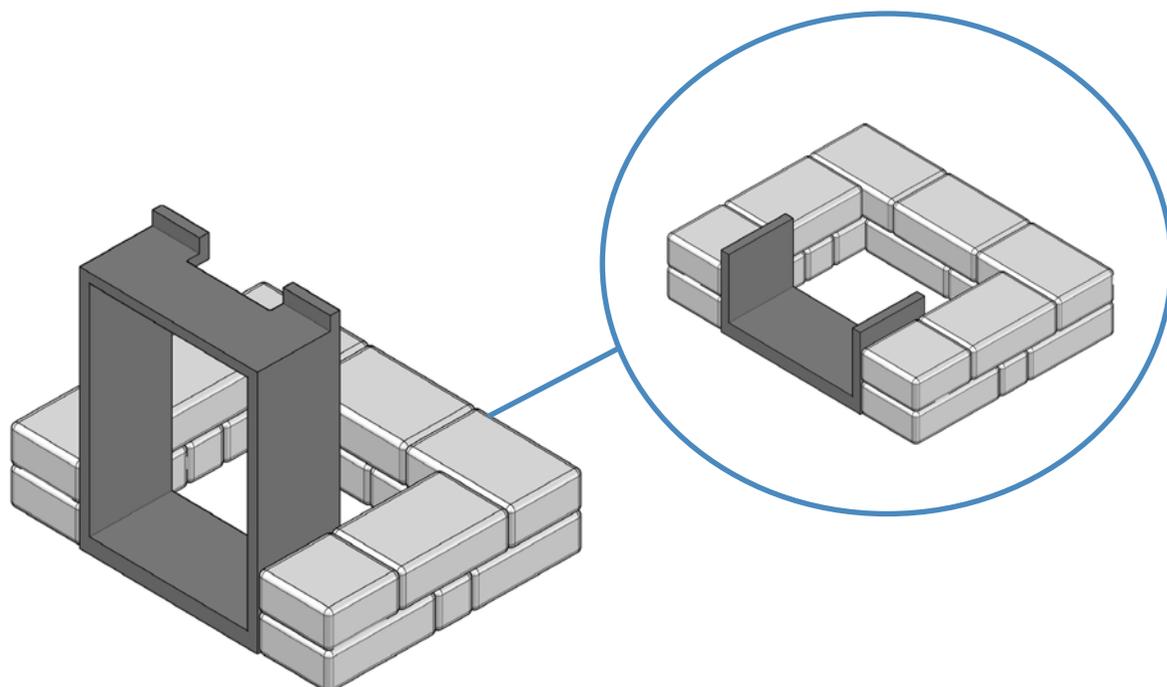


Lay down the stone pattern shown using 12" and 8" standard pieces. Glue this layer down to the 1st layer.

STEP 3

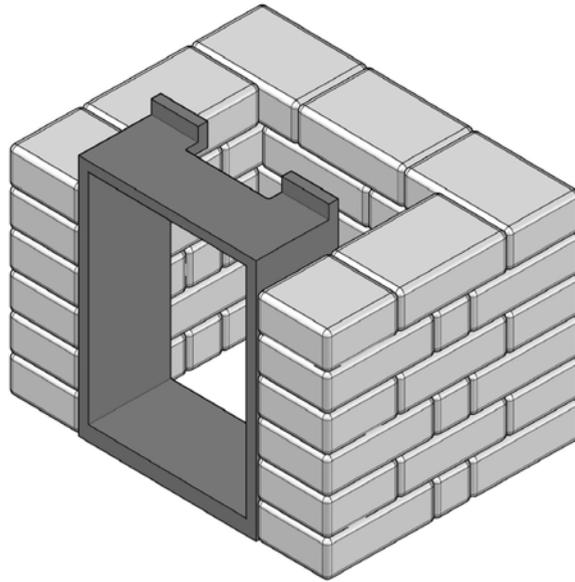


Repeat the patterns from Steps 1 & 2 until a total of 6 layers high.

STEP 4

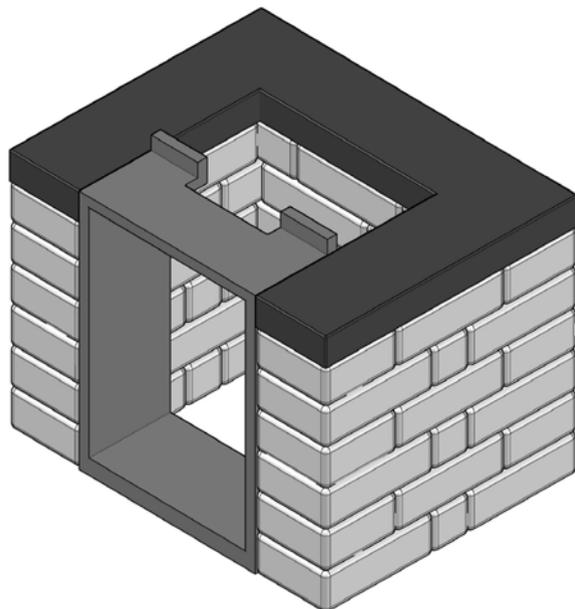


Lay down the *1-piece ebony accent band* as shown, and make sure it is level. Glue this down to the quarry stone below.

STEP 5

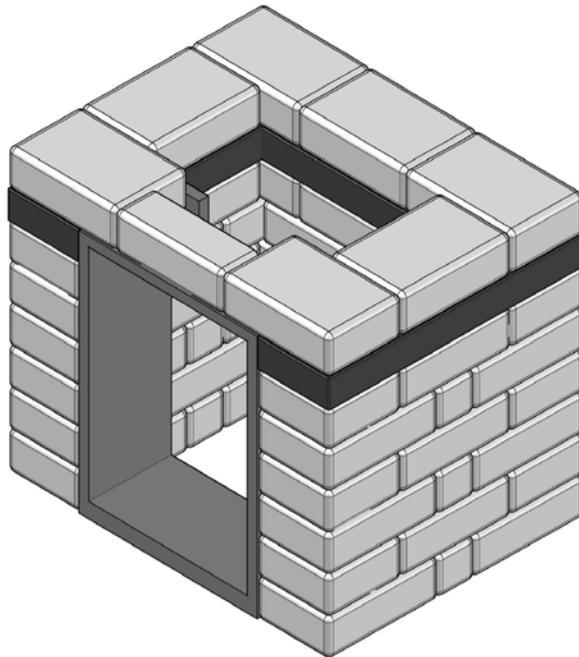


Lay down the stone pattern shown using 12" standard and 4"x4"x12" pieces. Make sure this layer is flush with the top of the frame. Glue this layer down to the 1-piece ebony accent band and waste receptacle frame.

STEP 6

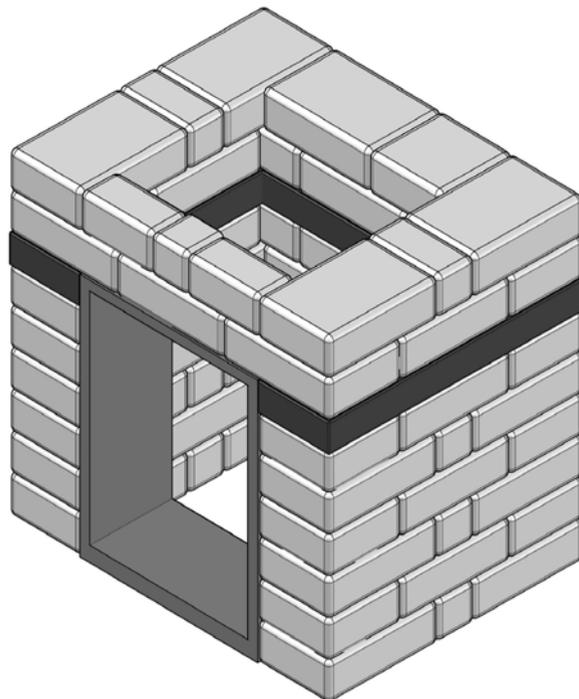


Lay down the stone pattern shown using 12", 8", 4" standard and 4"x4"x4" pieces.

STEP 7

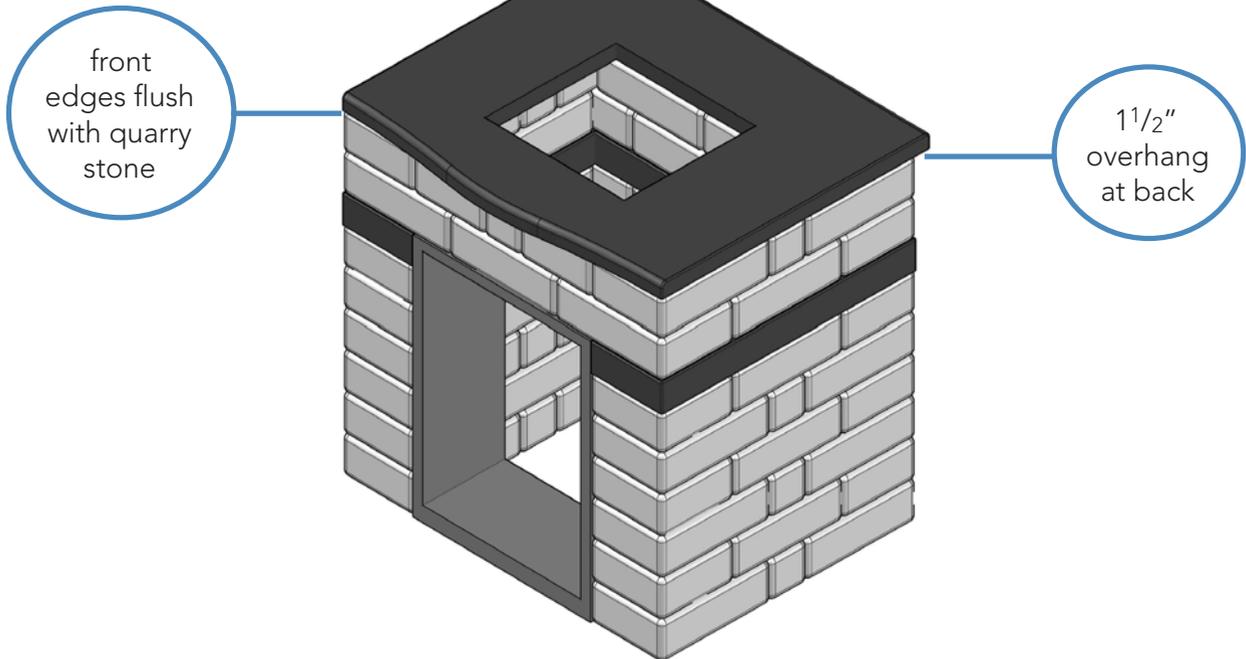


Lay down the *1-piece ebony countertop* as shown, and make sure it is level. Glue this down to the quarry stone below.

STEP 8

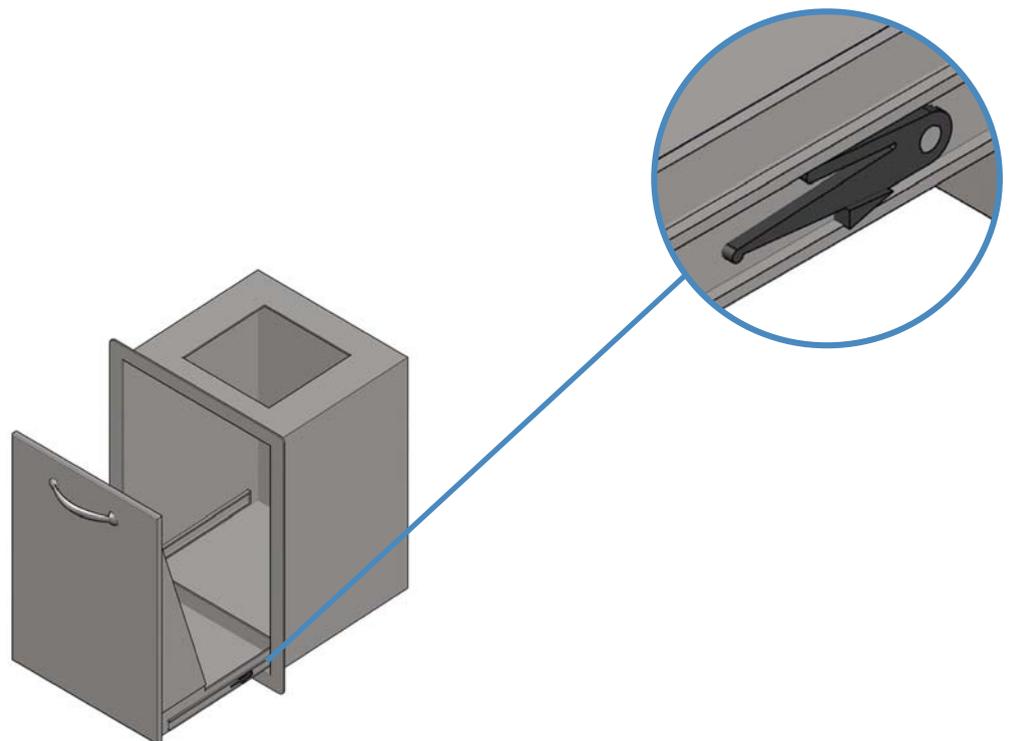


Remove the *pull-out waste receptacle drawer* by pressing on the black tabs located within each slider. **Press right-side up and left side down.** Attach handle on waste receptacle.

STEP 9

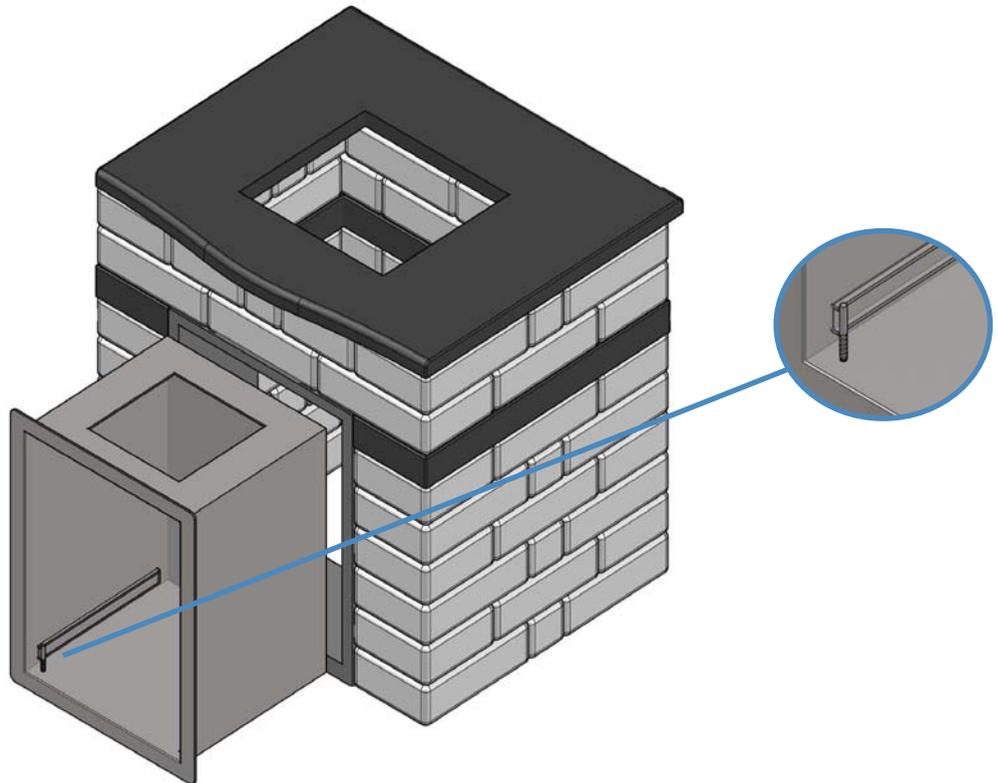


Pre-drill holes into the pull-out waste receptacle drawer with the steel drill bit provided. **Two holes on top and bottom approximately 1 inch in from the front.**

STEP 10

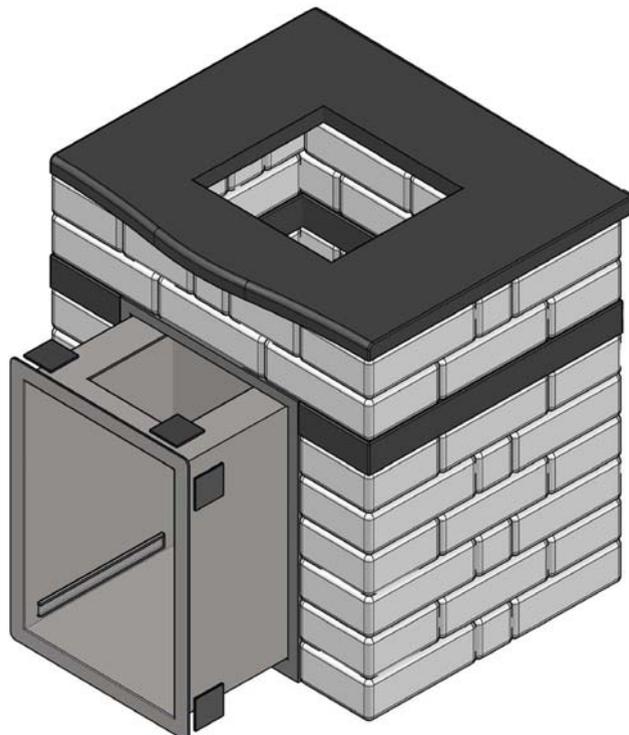


- 8 Insert the *pull-out waste receptacle drawer* into the *waste receptacle frame*. Use the include shims to ensure it fits snugly and remains square.

STEP 11

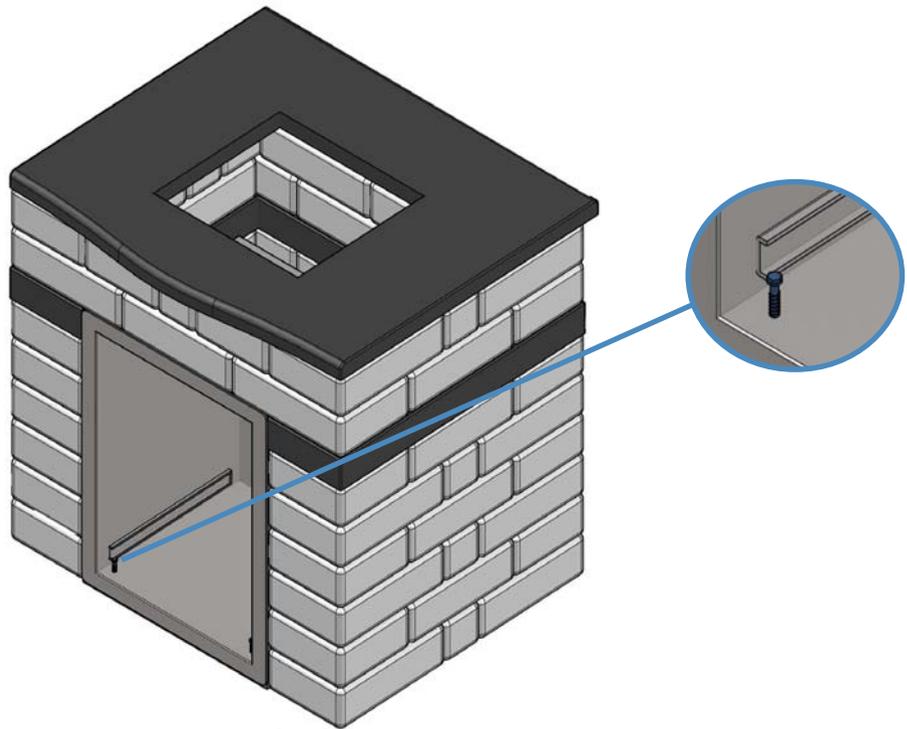


Pre-drill holes into the *waste receptacle frame* through openings in the *pull-out waste receptacle drawer* made in Step 9. Fasten in place with the provided concrete screws (do not overtighten). Reinsert the *pull-out waste receptacle drawer* thereafter.

STEP 12

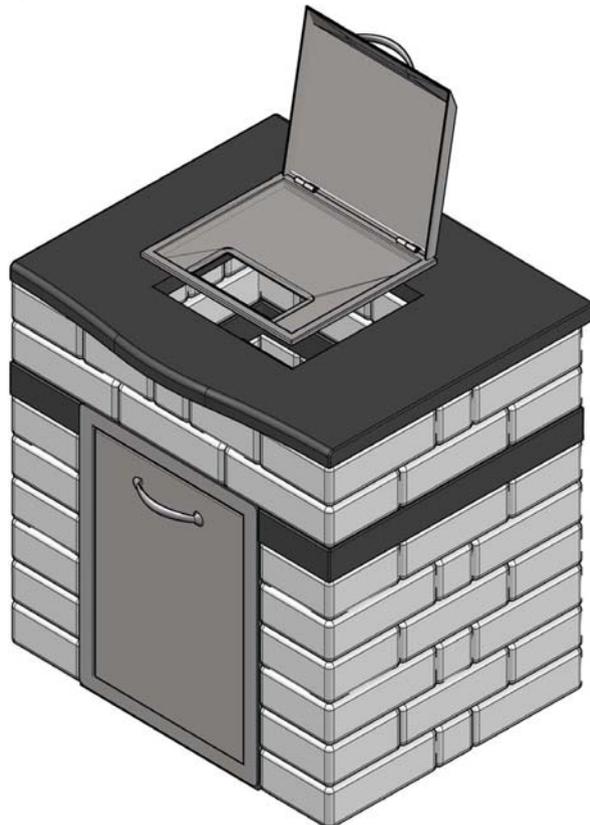


Place the *waste chute base* into the space provided. Attach handle to lid.

STEP 13

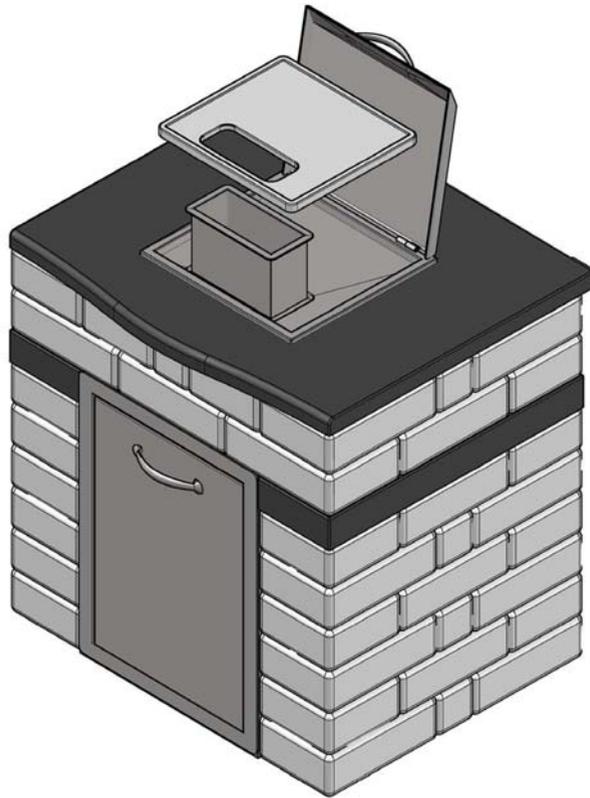

Place the *waste chute and cutting board* into the *base unit*.

STEP 14

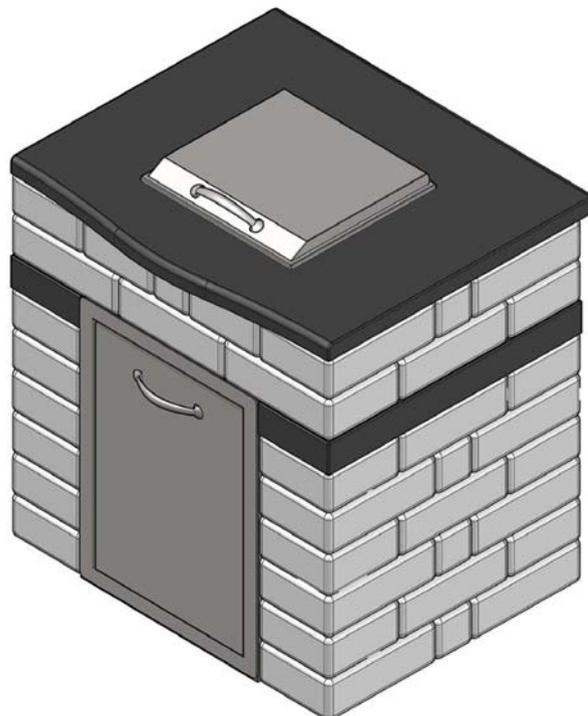

Ensure the *waste chute with cutting board* closes properly and aligns with the *pull-out waste receptacle drawer* below.

Harvest Grove Outdoor Kitchen Kits

BARKMAN CONCRETE LIMITED

Steinbach Office
152 Brandt Street, Steinbach, MB R5G 0R2
T 204 326 3445 or 1 800 461 2278
F 204 326 5915
steinbach@barkmanconcrete.com

Winnipeg Office
909 Gateway Road, Winnipeg, MB R2K 3L1
T 204 667 3310 or 1 800 342 2879
F 204 663 4854
winnipeg@barkmanconcrete.com

Calgary Office
813 McCool Street, Box 1136,
Crossfield, AB T0M 0S0
T 403 946 4630 F 403 946 4631
calgary@barkmanconcrete.com

Vancouver Office
2104-290 Newport Drive,
Port Moody, BC V3H 5N2
T 778 689 7670 or 1 800 461 2278
F 604 949 0321
vancouver@barkmanconcrete.com

DISTRIBUTION CENTERS

barkman Saskatoon
3550 Idylwyld Drive North, Saskatoon, SK
T 1 306 549 7544


barkman Kelowna
1904 Old Okanagan Highway, Westbank, BC
T 1 204 346 9490

barkman Surrey
8167 132nd Street, Surrey, BC
T 1 204 346 9490


Follow Barkman Concrete
on facebook, twitter
@barkmanconcrete and
visit our YouTube channel.




Made in Canada.

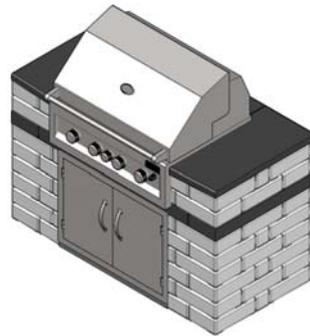


BBQ Grill

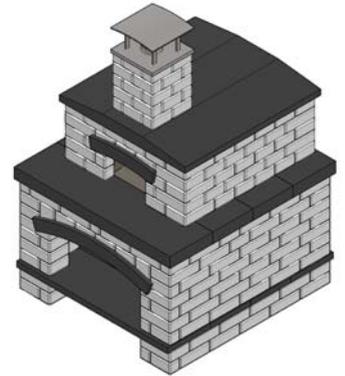


Pizza Oven

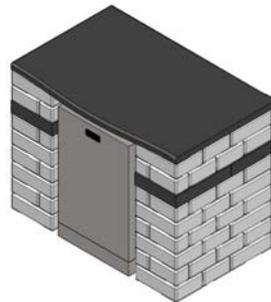


Bar with Fridge

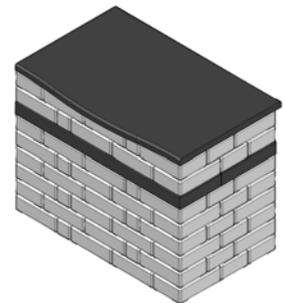


Bar Counter

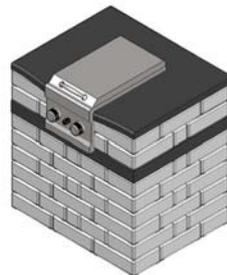


Side Burner

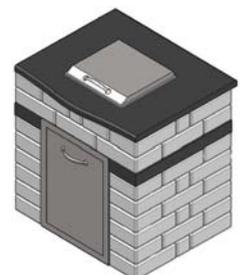

Prep Station with Waste Receptacle

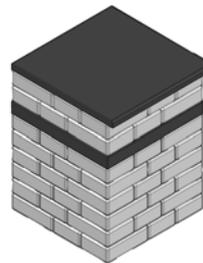

Corner Unit

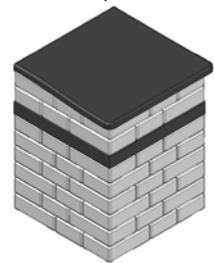

End Units (Left and Right)

barkman[™]
creating concrete solutions

www.barkmanconcrete.com